



ELECTRIFLAME XD STOVE

MODEL N°S

CESLGDRE - LARGE GLASS G2

CESSGDRE - SMALL GLASS G1

CESLMDRE - LARGE F2

CESSMDRE - SMALL F1

Packing Checking List

Package 1	1	off	Electric Stove
	1	off	Remote control handset
	2	off	AAA batteries
	1	off	Instructions manual

THIS INSTRUCTION BOOKLET MUST BE LEFT WITH THE USER

INSTALLATION INSTRUCTIONS

This stove must be installed by a qualified, competent person.

A. Location

1. The stove must have a minimum clearance of 50mm to combustible material on all sides. A clearance of minimum 50mm to non-combustible materials is also required to ensure correct operation.
2. This appliance is for indoor installation only and is not designed to be installed outside. The appliance must be kept away from any source of damp or moist conditions. Avoid any close contact with water.
3. If there is any doubt regarding the suitability of the installation site contact your supplier.

B. Electrical Work

THIS PRODUCT MUST BE EARTHED

1. If the mains socket is required to be concealed this can be sited adjacent to the back of the fireplace.
2. Should the stove be connected directly into the mains supply a fused switch spur with a 13 amp fuse must be fitted. It is imperative that the power supply is capable of handling a load of 2000 watts(2kW).
3. If the supply cable is damaged in any manner it **MUST** be replaced.
4. Do not connect the appliance to an extension lead.
5. The stove must not be modified from the manufactures specification in any way and the appliance must only be used for the purpose recommended by the manufacturer.
6. If the stove shows any signs of damage it is important that it is examined by a qualified person.
7. Please observe these instructions as failure to do so may result in electric shock or other injury.
8. Check the technical specification.
9. Always ensure that all electrical work complies with the relevant Building Regulations and the Electrical Code of Practice. All electrical work should be carried out by a qualified electrician.
10. Do not install a time switch to operate the appliance.
11. If in any doubt contact your supplier or a qualified electrician.

THE INSTALLER SHOULD EXPLAIN FULLY HOW TO OPERATE THE APPLIANCE

OPERATING INSTRUCTIONS



Please read these instructions carefully before attempting to use the appliance and retain for future use.

1. When the stove is in operation certain areas will get hot. Caution must be taken to avoid being burned.
2. The stove must not be switched on if volatile vapors are present in the room.
3. Children must be supervised around the stove.
4. Do not obstruct the air flow around the appliance.
5. Ensure that the stove is switched off at the mains before cleaning or carrying out any maintenance work.
6. When the fire is not in use it should be switched off at the mains supply.
7. Do not push any objects through the vent of the stove as this may result in an electric shock or could cause a fire.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
9. In order to avoid overheating, do not cover the heater.
10. Make sure the heater is not located immediately below a socket outlet.
11. This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Control panel on Stove

The control panel is located behind the door of the stove.

- A On/off Isolating Switch
- B Flame Effect Dimmer Switch
- C Low Heat 1000W
- D High Heat 2000W

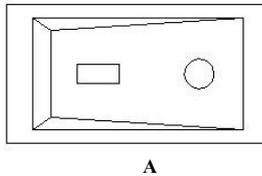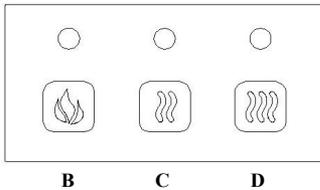

Remote Control


Prior to use the remote control handset requires the insertion of 2 x AAA batteries.

Remove the cover on the rear of the remote handset by sliding backwards. Install the batteries as shown and then slide the cover back into the original position.

To enable the remote control to function the power to the stove must be switched on.

At a distance of 1.5 meters to 2 meters point the remote control handset directly towards the stove.

- A. On/off Switch
- B. Flame Effect adjuster - To operate, press one to five times to commence the cycle of 3 different brightness levels and one motion ember bed effect level. Press a fifth time to shut down the flame&ember bed effect.
- C. Low Heat
- D. High Heat

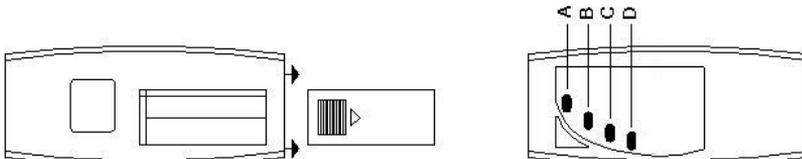

TECHNICAL SPECIFICATION

Power Supply	230VAC 50Hz		
General Power	10W	to	2000W
Heat Power	1000W	to	2000W
Flame Effect	10W	to	12W

Heater has an over heating power cut off safety feature.

MAINTENANCE INSTRUCTIONS

Cleaning the Stove

Switch off the power to the stove and allow it to cool before cleaning.

Use a soft damp (not wet) cloth.

Household Glass Cleaner can be used on the Glass.

WARRANTY

In the unlikely event of a problem occurring due to a manufacturing fault within 24 months from the date of purchase of the appliance it will be repaired or replaced free of charge.

This warranty does not cover consumable items which have a limited lifespan.

If a problem should occur, the nature of the problem together with the date of purchase and installer information should be immediately reported to the retailer that the appliance was purchased from. Proof of purchase will be required so the original invoice should be retained.

Part N°s

B-180170

B-180180

B-180190

B-180200



Issue 1

BFM Europe Ltd
Gordon Banks Drive
Trentham Lakes
Stoke-on-Trent
ST4 4TJ

Telephone (General Enquiries) 01782 339000

Telephone (Service) 08447700169