



**MAZONA**  
**S T O V E S**



## **Newport 5 - Smoke Control Area Exempt**

Operation and Installation Manual

Version 1 – 23/3/2018\_MZNP5MFSE

PLEASE RETAIN FOR FUTURE REFERENCE

## The Clean Air Act 1993 and Smoke Control Areas

Under the Clean Air Act local authorities may declare the whole or part of the district of the authority to be a smoke control area. It is an offence to emit smoke from a chimney of a building, from a furnace or from any fixed boiler if located in a designated smoke control area. It is also an offence to acquire an "unauthorised fuel" for use within a smoke control area unless it is used in an "exempt" appliance ("exempted" from the controls which generally apply in the smoke control area).

In England appliances are exempted by publication on a list by the Secretary of State in accordance with changes made to sections 20 and 21 of the Clean Air Act 1993 by section 15 of the Deregulation Act 2015. In Scotland appliances are exempted by publication on a list by Scottish Ministers under section 50 of the Regulatory Reform (Scotland) Act 2014. Similarly, In Northern Ireland appliances are exempted by publication on a list by the Department of Agriculture, Environment and Rural Affairs under Section 16 of the Environmental Better regulation Act (Northern Ireland) 2016. In Wales appliances are exempted by regulations made by Welsh Ministers.

Further information on the requirements of the Clean Air Act can be found here: <https://www.gov.uk/smoke-control-area-rules>

Your local authority is responsible for implementing the Clean Air Act 1993 including designation and supervision of smoke control areas and you can contact them for details of Clean Air Act requirements.

## Smoke Control Area Exempt

**The Newport stove has been recommended as suitable for use in smoke control areas when burning dry untreated wood logs and fitted with a mechanical stop to prevent secondary air control closure beyond the 3mm open position.**

## **IMPORTANT**

It is important that this manual is read by the installer before installation. The householder should familiarise themselves with the manual before using the appliance. Incorrect installation of this stove can be dangerous. The installation should be carried out by a trained competent person and in accordance with local and national building regulations.

For practical guidance in respect to the installation of your stove, required ventilation, hearth construction, flue construction and compliance with building regulations please refer to:

Oftec Information on Relevant Building Regulations:

<https://www.oftec.org.uk/consumers/heating-installation-work-and-buildingregulations>

Hetas Information on Relevant Building Regulations:

<https://www.hetas.co.uk/consumer/regulations/>

Approved Document J of the Building regulations 2010 (England and Wales)

<http://www.planningportal.gov.uk/buildingregulations/approveddocuments/partj/approved>

The Communities and Local Government website: [www.communities.gov.uk](http://www.communities.gov.uk)

The Planning Portal website: [www.planningportal.gov.uk](http://www.planningportal.gov.uk)

If you are the person undertaking the building work, you can seek assistance from the relevant local authority building control service or from your approved inspector.

Please note that, depending on which part of the UK or Ireland the stove is being fitted, you may be responsible for ensuring that the work carried out complies with building regulations. The building owner may also have a responsibility for ensuring compliance of building regulation requirements.

# **1. INSTALLATION INSTRUCTIONS**

## **APPLIANCE LOCATION**

The appliance must be located at specific distances from its surroundings. This is to prevent damage to products & furnishings within the vicinity of the appliance. Adequate space should be provided for servicing the appliance.

There must be a minimum clearance of 150mm each side of the appliance, with 300mm clearance above the stove to provide sufficient space for heat to dissipate to room space.

<b>Distance to combustibles</b>	<b>Side</b>	<b>Back</b>	<b>Hearth Temp.</b>
Newport 5	60cm	40cm	> 100°C

## **VENTILATION**

Your stove requires ventilation to supply it with air for combustion. Ventilation is also required to ensure the proper operation of flues and chimneys to ensure that the products of combustion are safely dispersed to the outside air. Please ensure the stove has sufficient ventilation for operation.

Extraction fans lower the pressure in a building which can cause spillage of combustion products from an open-flued appliance. This can occur even if the appliance and the fan are in different rooms. If

mechanical extraction is unavoidable in the same room as your stove, then seek specialist advice to ensure safe operation of the appliance.

A competent installer should be aware of specific ventilation parameters. Specific information on venting parameters can be found at: <https://www.hetas.co.uk/19223/>

## **FLUE / CHIMNEY**

It is important that the flue or chimney to which this appliance is to be connected has been checked by a competent person to ensure its suitability and that it will work safely. The chimney or flue and installation should comply with local and national building regulations.

Sufficient operating draft is required for the product to function optimally. The following considerations should be taken into account to ensure safe operation of the appliance.

The flue must be:

- Suitable for use with solid fuel burning appliances (Rating of T400).
- In good condition and provide a draft of 10-20 Pa.
- Free from any internal obstructions.
- At least 4.5 metres from the top of the stove outlet to the top of the chimney.
- Independent from a shared flue system of any type.
- Larger or equal in diameter than the appliance flue collar size.

Provision should be made to ensure the chimney can be swept in the entirety of its length.

If using single wall flue, please ensure there is a clearance of at least 3 times the diameter of the flue pipe from any combustible material (e.g. 150mm pipe = 450mm minimum clearance to wooden beam).

## **HEARTH CONSTRUCTION**

Hearths should be constructed of suitably robust materials and to appropriate dimensions such that, in normal use, they prevent combustion appliances setting fire to the building fabric and furnishings and they limit the risk of people being accidentally burnt.

The hearth should be able to support the weight of the stove and its chimney if the chimney is not independently supported.

## **2. OPERATION INSTRUCTIONS**

### **Lighting the stove**

Open the door and ensure the air wash on the top of the door is opened fully. On first lighting, we recommend using 2 -3 firelighters along with wood kindling built in a pyramid above the firelighters to obtain a good fire bed. Ignite the firelighters, then close the stove door and allow the firelighters and wood kindling to ignite to the point where the embers are glowing. Then add your fuel of choice and control the stove as advised. Burn small loads initially in your new appliance before full fires are used, to allow paint & fitting cement to cure.

### **Controlling Stove**

**Burning wood:** the stove should be controlled with the airwash control knob, the higher of the two controls. To open this slide the lever to the right.

The primary air control knob, at (the lower of the two controls) should be closed (to the left) as wood does not need air from below to burn effectively.

Ensure to avoid overloading your appliance as this may cause damage to the product and cause unstable burn conditions. No more than 2 logs should be burnt at any time.

**Burning coal:** the stove should be mainly controlled by the primary air intake control knob at the bottom of the stove. The airwash knob should be opened enough to ensure the glass is clean.

Avoid prolonged periods of slow burning which may cause build up of creosote with certain fuels. Using a flue temperature gauge can help achieve the optimum temperature for clean combustion. Ensure to use the suitable fuel for the appliance.

## Recommended Fuels

- Split and dried logs properly seasoned with less than 20% moisture content. No larger than 30cm by 10cm.
- Anthracite (Medium) smokeless fuel. □ Eco Logs.
- Briquettes

Guidance on the correct fuels to use in your stove can be found at [www.hetas.co.uk](http://www.hetas.co.uk) and [www.soildfuel.co.uk](http://www.soildfuel.co.uk).

## Fuel to Avoid

Use of incorrect fuels can **invalidate the warranty of your appliance.**

- Petroleum Coke
- Household waste
- Green wood or freshly cut wood
- Household coal or bituminous coal
- Waste timber that has been painted or treated i.e. railway sleepers

## **Refuelling Wood**

Refuel when a **layer of hot embers has been formed** in the fire bed. Spread the embers out over the fire bed with a poker. While the embers are still glowing add 1 or 2 logs to the fire. Open the top air control fully to ignite the new fuel. Once new logs have ignited adjust the air control to give the desired combustion. If there are too few embers, use suitable kindling prior to the fuel load to prevent excessive smoke.

Max fuel load – 2kg (The maximum amount of fuel specified in this manual should not be exceeded, overloading can cause excess smoke)

## **Refuelling Coal**

De-ash the fire bed. Fully open the bottom air intake. When the new fuel is fully lit adjust the bottom air intake to give the desired combustion.

## **Refuelling on to a low fire bed**

If there is insufficient burning material in the firebed to light a new fuel charge, excessive smoke emission can occur. Refuelling must be carried out onto a sufficient quantity of glowing embers and ash that the new fuel charge will ignite in a reasonable period. If there are too few embers in the fire bed, add suitable kindling to prevent excessive smoke.

## **Weather Conditions**

Weather conditions can affect the performance of the stove. Strong winds combined with close buildings or trees can cause the stove to smoke. Heavy rain may lower the temperature of the flue making it difficult to light or slow to heat up.

## **Operation with door left open**

Operation with the door open can cause excess smoke. The appliance must not be operated with the appliance door left open except as directed in the instructions.

## Troubleshooting

<u>Problem</u>	<u>Probable Cause</u>	<u>Recommended Action</u>
<b>Fire Difficult to light</b>	Green/Wet wood	Use Recommended Fuels
	Insufficient Air	Open Air Controls
	Insufficient Draft	Check Flue is not obstructed, sweep if needed
<b>Fire Burns too quickly</b>	Fuel too large	Use kindling / small logs to start fire
	Too much Air	Reduce air controls
<b>Smokes upon initial lighting</b>	Excessive draft	Install draft stabiliser/damper
	Cold Flue pipe	Burn firelighters/small fuel loads to preheat flue prior to lighting
<b>Smokes while burning</b>	Insufficient draft	Check flue is not obstructed
<b>Glass blackening</b>	Insufficient Air	Open Airwash control
	Damp Fuel	Use Recommended Fuels
<b>Glass Crazing (minute splinter marks on glass)</b>	Insufficient Seal	Check Condition of rope seal around glass
	Cold Liquid hitting warm glass	Replace glass

## **IMPORTANT NOTICE**

**WARNING:** The stove is designed to be operated only with the doors shut. When properly installed and operated this appliance should only emit fumes during fuelling and de-ashing. The stove is designed to be operated only with the doors shut. To prevent fume spillage only open the doors for ignition, refuelling and cleaning. Persistent fume emission is dangerous and in certain circumstances could be fatal and should not be tolerated. If you experience heavy or persistent fume emission, please follow the procedure below.

- Open all windows or doors to ventilate the area.
- Extinguish the fire and if safe to do so remove fuel from the appliance.
- Check for blockages in the appliance and clear if possible. Particular attention should be paid to the baffle plate which should be removed and cleaned at least once per month.
- Have the chimney checked by a professional person for any sign of blockage.
- Do not attempt to relight the appliance until the source of the blockage has been determined and cleared.
- Seek professional opinion on the cause of the blockage if in any doubt.

You may also find a smell from the appliance on initial lighting while the paint cures. Stove paint must be cured on the surface of an appliance. During the first few hours of burning, there will be some fumes / smoke as the paint cures. When the body of the appliance is properly heated, it usually takes about an hour or so after that to bake / cure the paint. It is wise to ventilate the room well by opening windows / doors during this time and where possible, leave the room.

In the event of a chimney fire, immediately close the door and move the air wash to the closed position. Call for aid from fire service. A chimney fire can cause significant damage to the chimney construction and must be assessed by a professional before relighting your appliance.

Never burn plastics, household waste or liquids in your stove.

## **MAINTENANCE**

### **De-ashing**

The appliance should be de-ashed at least once every 24 hours depending on fuel type and heating load. Using the riddling bar on the side of the appliance, filter the ash through the slots in the bottom grate into the ashpan. It is important that the level of ash in the ash pan is not allowed to build up to where it is touching the bottom grate. This will cause the grate to burn out prematurely.

### **Baffle plate**

It is important that the baffle plate is removed and cleaned at least once every month while the stove is in use.

### **Glass Cleaning**

We recommend that the glass is allowed to cool before using a damp cloth to clean it. Abrasive cleaners should be avoided as they have a tendency to scrape the glass making it more and more difficult to keep clean. Use of a stove glass cleaner (available from your retailer) is recommended for stubborn stains.

### **Door**

Check that the seal around the door is air tight. Replace rope seal if necessary.

### **Paintwork**

If paintwork needs repair, contact your retailer directly. The paint used on your product is specialised high temperature resistant paint and ordinary paint will not suffice. Never perform any paint repair when unit is hot.

### **Flue / Chimney cleaning**

Please ensure that Flue is swept as instructed. Blockages or Build ups within the flue can cause loss of performance, damage to the product and harm to the surroundings and users as a result.

Anthracite – At least once a year.

Wood – Quarterly when in use

## TECHNICAL INFORMATION

### Technical Information – Burning Beech wood

	<b>Output kW (Nominal)</b>	<b>Efficiency</b>	<b>Emissions CO at 13% O2</b>	<b>Flue gas temperature °C</b>
<b>Newport 5 SE</b>	<b>4.9kW</b>	<b>82.5%</b>	<b>0.37%</b>	<b>292</b>



### Technical Information – Burning Anthracite


	<b>Output kW (Nominal)</b>	<b>Efficiency</b>	<b>Emissions CO at 13% O2</b>	<b>Flue gas tempera ture °C</b>
<b>Newport 5 SE</b>	<b>5</b>	<b>74.9%</b>	<b>0.07%</b>	<b>305</b>

### DIMENSIONS

	<b>Height(mm)</b>	<b>Width(mm)</b>	<b>Depth(mm)</b>
<b>Newport 5 SE</b>	<b>530mm</b>	<b>450mm</b>	<b>325mm</b>
	<b>Weight (Kg)</b>	<b>Collar(mm)</b>	<b>Maximum log length(mm)</b>
	<b>66</b>	<b>5"/125mm</b>	<b>300mm×100mm</b>

## PRODUCT DRAWINGS

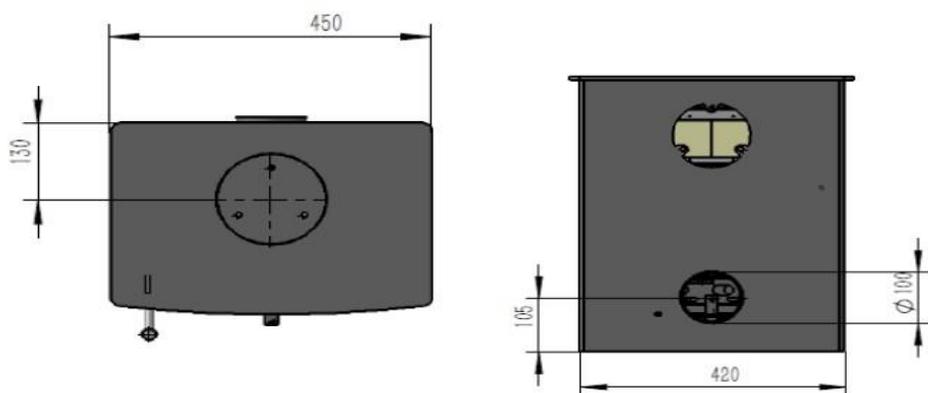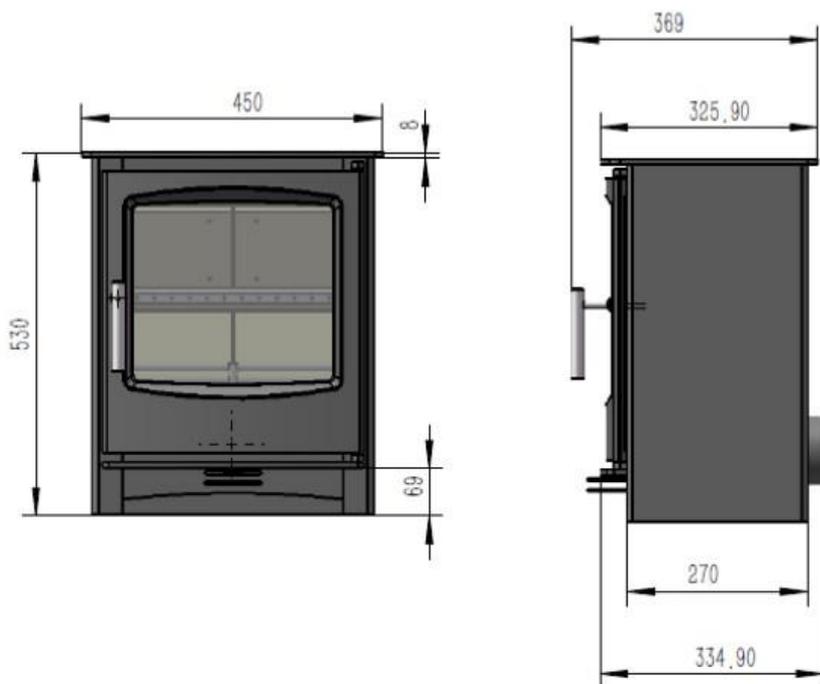

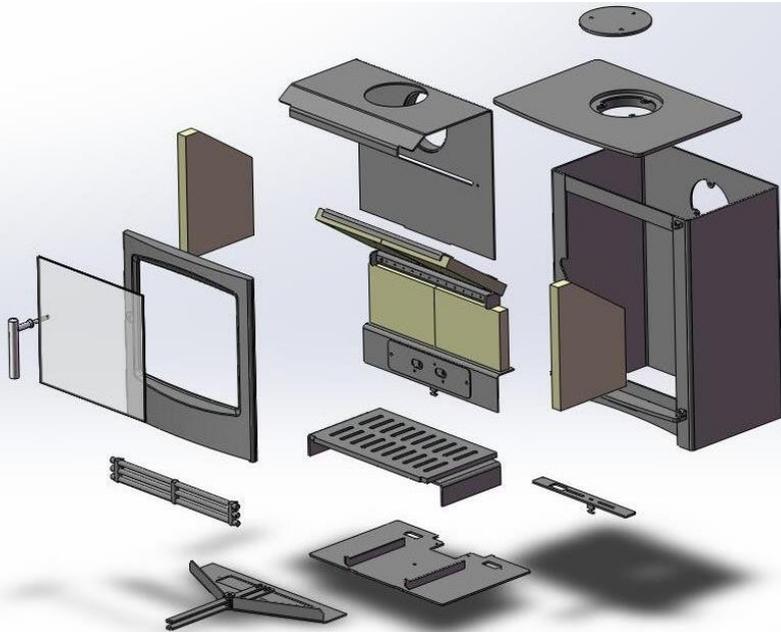

### **PARTS LIST**

<b>Product Part</b>	<b>Quantity</b>
<b>Door Handle</b>	<b>1</b>
<b>Glass Pane</b>	<b>1</b>
<b>Door Frame</b>	<b>1</b>
<b>Front Bar</b>	<b>1</b>
<b>Bottom Grate</b>	<b>1</b>
<b>Side Plate</b>	<b>2</b>
<b>Under Plate</b>	<b>1</b>
<b>Upper Plate</b>	<b>1</b>
<b>Baffle</b>	<b>1</b>
<b>Flue Cover</b>	<b>1</b>
<b>Ash-pit</b>	<b>1</b>
<b>Control Bar</b>	<b>2</b>
<b>Sliding Plate</b>	<b>1</b>

## WARRANTY

5 Years – Your warranty covers replacement of the stove body if it is found to be defective within 5 years of purchase. Labour and shipping costs are not covered.

1 Year – Bottom grate, baffle plate riddling bars, front bars, ashpan and handle.

### **Not Covered**

Glass, rope seals, baffle plate, vermiculite bricks.

Defects or faults caused by local conditions such as draught problems and chimney defects.

Damage caused by over firing.

Damage resulting from the use of unsuitable fuel.

Unauthorised modifications, misuse, neglect, abuse, excessive wear and tear and the use of non-original replacement parts will invalidate the warranty of the stove.

---

**Should you require any further information, or wish to view our other products available please view at [www.mazonastoves.com](http://www.mazonastoves.com)**

**All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing from Micon Distribution Ltd**

**Imported and Distributed by Micon Distribution Ltd.**  
**1a Hallstown Road, Ballinderry Upper, Lisburn BT28 2NE**  
**Mazona Brand exclusively owned by Micon**

**WARRANTY CLAIM FORM**



**MAZONA**

PLEASE ENSURE ALL MANDATORY SECTIONS (\*) ARE CORRECTLY COMPLETED OR WE WILL NOT BE ABLE TO PROCESS YOUR CLAIM

**STOVES**

<b>Customer name*</b>	
<b>Customer Address*</b>	
<b>Post Code*</b>	
<b>Date:*</b>	
<b>Contact Number(s)*</b>	
<b>Retailer Name*</b>	
<b>Retailer Contact*</b>	
<b>Date of Purchase</b>	
<b>Problem reported*</b>	
<b>Comments</b>	
<b>Date of Installation*</b>	
<b>Installers name *</b>	
<b>Installers Registration No.*</b>	
<b>Building Control Certificate Number</b>	

**Customer Signature:\***

**Date:\***

