



Celestial 36", 50", 60" & 72" Electric Fire Range OWNERS MANUAL



Model Numbers: MZEFTCEL36, MZEFTCEL50, MZEFTCEL60, MZEFTCEL72
AC 220-240V, 50Hz 1400-1600W

WARNING

Please read the entire owner's manual, including **all safety information**, before plugging in or **using** this product. Failure to do so could result in **fire, electric shock, or serious personal injury**.

CAUTION

Keep the owner's manual for future reference. If you sell or give this product away, **make sure this manual accompanies this product**.



@ezeeglow



@ezeeglowelectricfires

Be sure to upload your fire image using #ezeeglow and tag Ezee Glow on Facebook or Instagram to feature on our social media!

Rev G

IMPORTANT SAFETY INFORMATION!

WARNING

When using electrical appliances basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burning, do not touch hot surface. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 1 m from the front of the heater and keep them away from the sides and rear. In order to avoid overheating, do not cover the heater.
- Extreme caution is necessary when any heater is used near children or the infirm and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord/ plug, after the heater malfunctions or has been damaged in any manner. Return heater to authorized service facility for examination, electrical/ mechanical adjustment, and repair.
- Indoor use only, do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas or similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic areas, where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert objects to enter any ventilation or exhaust openings, as this may cause an electric shock, fire, or damage to the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces like a bed, where openings may become blocked.
- The heater has hot, arcing parts inside. Do not use it in areas where flammable liquids are used/ stored.
- Use this heater only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- DANGER - HIGH Temperatures may be generated under certain abnormal conditions. Do not partially or fully cover/ obstruct the front of this heater.
- Do not install heater directly below a power socket outlet.
- This appliance is not intended for use by persons (including children) with reduced physical/ sensory capabilities or by those with a lack of experience/ knowledge, unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on/ off by the utility.

IMPORTANT SAFETY INFORMATION!

WARNING

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Children less than 3 years old should be kept away from the appliance. Children aged from 3 – 8 years shall only switch on the appliance, provided it is properly installed, have been given instruction on how to use it and understand the hazards involved. Children aged 3 – 8 shall not plug in, clean, or perform maintenance tasks on the appliance.

• CAUTION — Some parts of this product can become very hot and cause burns. Particular attention must be given when children and vulnerable people are present.

ELECTRICAL CONNECTIONS – UK PLUG WIRING INSTRUCTION

- If the plug must be changed because it is not suitable for your socket, or due to damage, please follow the wiring instructions shown below.

- The wires in the mains lead are coloured in accordance with the following code:


BROWN: LIVE (L)

BLUE: NEUTRAL (N)

GREEN/YELLOW: EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please see below:

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK.
- The BROWN wire is the LIVE and must be connected to the terminal that is marked with the letter L or coloured RED.
- The GREEN/YELLOW must be connected to the terminal which is marked E or the earth symbol or coloured GREEN or GREEN/YELLOW.
- Always ensure that the cord grip is positioned and securely fastened.
- **WARNING: THIS APPLIANCE MUST BE EARTHED.**
- *If a 13A (BS1363) fused plug is used it must be fitted with a BS1362 13A fuse. If in doubt consult a qualified electrician.*

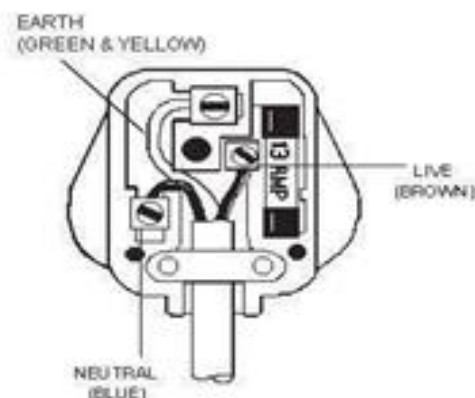

Install preparation


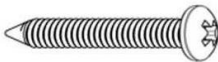

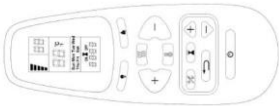
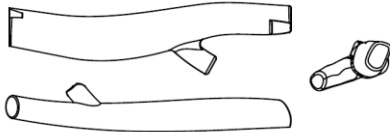
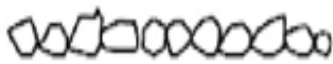






This product includes a **GLASS** panel. Use **extreme caution** when **handling**. Failure to do so could result in **personal injury** or **property damage**.


Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Check the parts list to make sure you have all the parts you need. Please recycle all packaging material at your local recycling center.

You will need the following tools (not included): Phillips screwdriver, drill and drill-bit set.

Parts and Hardware

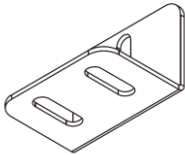 <p>A – Fireplace</p>	 <p>B – Wood Screws</p>	 <p>C – Drywall anchors</p>
	 <p>D- Remote Control</p>	
	 <p>E-Artificial logs</p>	 <p>F- Decorative Crystals</p>
	 <p>G- Charred wood pieces</p>	
 <p>H – Fuel-bed tray</p>	 <p>I- 'L shape' metal bracket</p>	 <p>J- Instruction Manual</p>

Dimensions

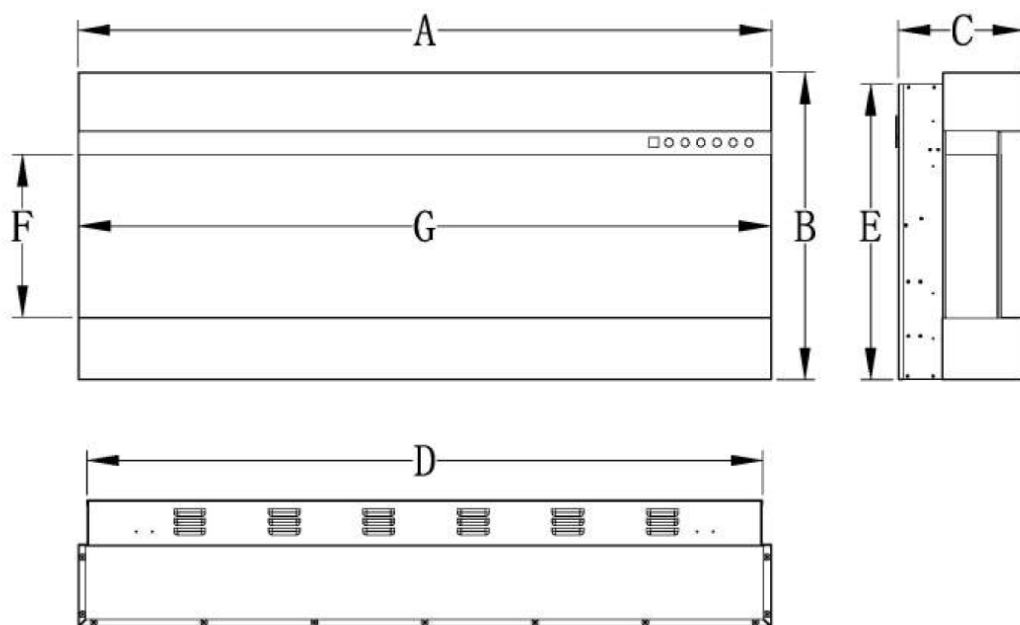


PRODUCT DIMENSIONS

Model Number	A	B	C	D	E	F	G
MZEFTCEL36	36.6" 93cm	19.1" 48.4cm	7.9" 20cm	35.5" 90.2cm	18.3" 46.56cm	10.1" 25.61cm	36.4" 92.57cm
MZEFTCEL50	50" 127cm	19.1" 48.4cm	7.9" 20cm	48.9" 124.2cm	18.3" 46.56cm	10.1" 25.61cm	49.8" 126.57cm
MZEFTCEL60	60" 152.4cm	19.1" 48.4cm	7.9" 20cm	58.9" 149.6cm	18.3" 46.56cm	10.1" 25.61cm	59.8" 151.97cm
MZEFTCEL72	72" 182.8cm	19.1" 48.4cm	7.9" 20cm	70.9" 180cm	18.3" 46.56cm	10.1" 25.61cm	71.8" 182.37cm

Installation Overview

Your appliance facilitates three different installation configurations: **three-sided**, **two-sided**, and **single-sided**.

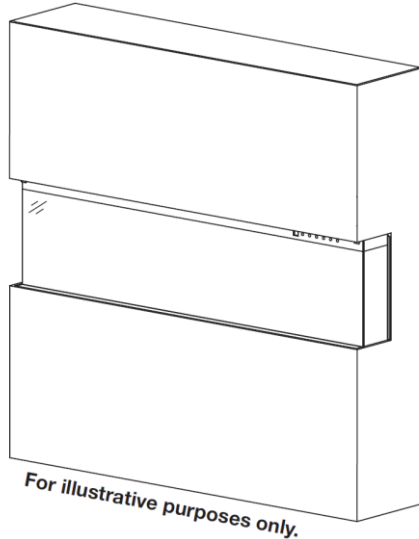



Three-sided installation

- Glass exposed on front, left, AND right sides
- Appliance is fully recessed into the wall with both sides open.
- See pages 9 and 10 for more info.

Two-sided installation

- Glass exposed on front AND left OR right sides.
- Appliance is fully recessed into the wall with one side open.
- See pages 9 and 10 for more info.

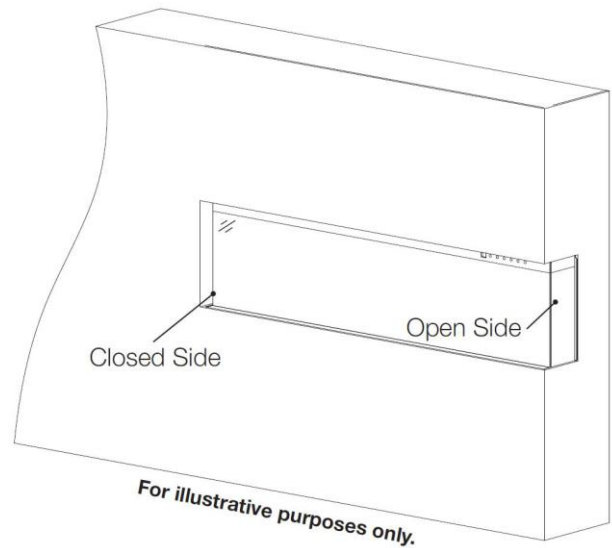

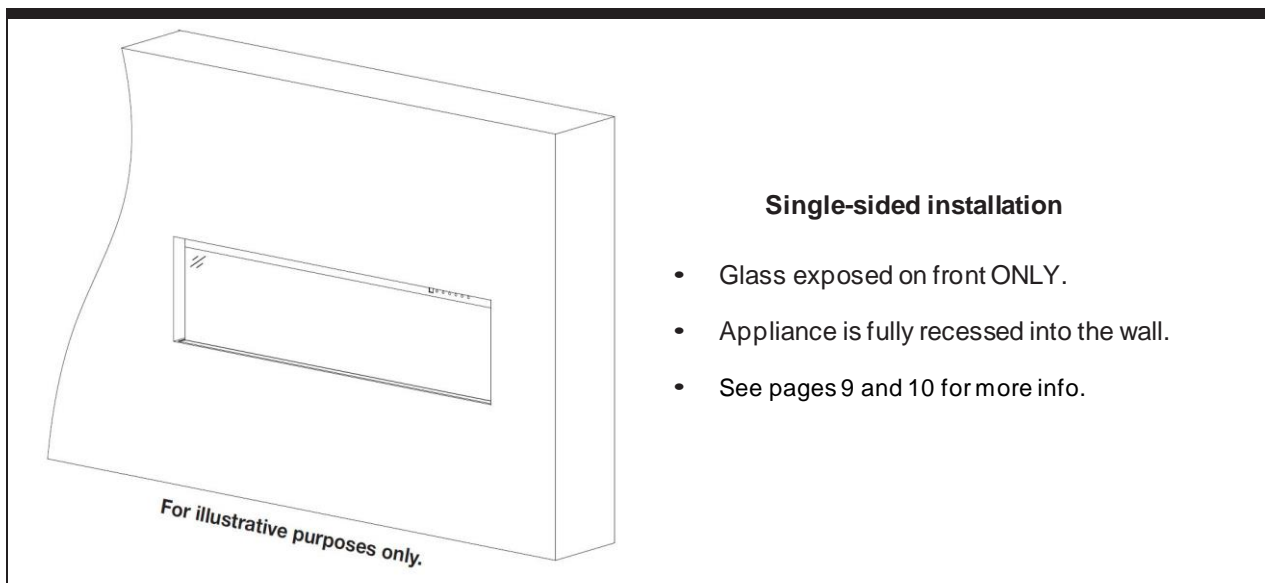

Installation / Minimum Clearance

Your appliance is a recess installed appliance. Select a suitable location that is not susceptible to moisture build-up. It must be located enough distance away from curtains, furniture, and high traffic areas. See below for more info.

NOTE: Follow all local and national electrical regulations/ codes.


NOTE: A timber/ metal frame can be constructed that is flush with the fire unit on the top, bottom and sides, as long as the vents on the fire unit are not obstructed and the frame is hollow to allow for airflow.

NOTE: We recommend you don't place soft furnishings directly in front of the heater outlet.

MINIMUM CLEARANCES

All measurements taken from front, measuring from perimeter of glass screen			
Bottom	0"	Top	3.95" (10cm)
Sides	0"	Front	7.9" (20cm)
Back	1.2" (3cm)		

Installation - Rough Framing

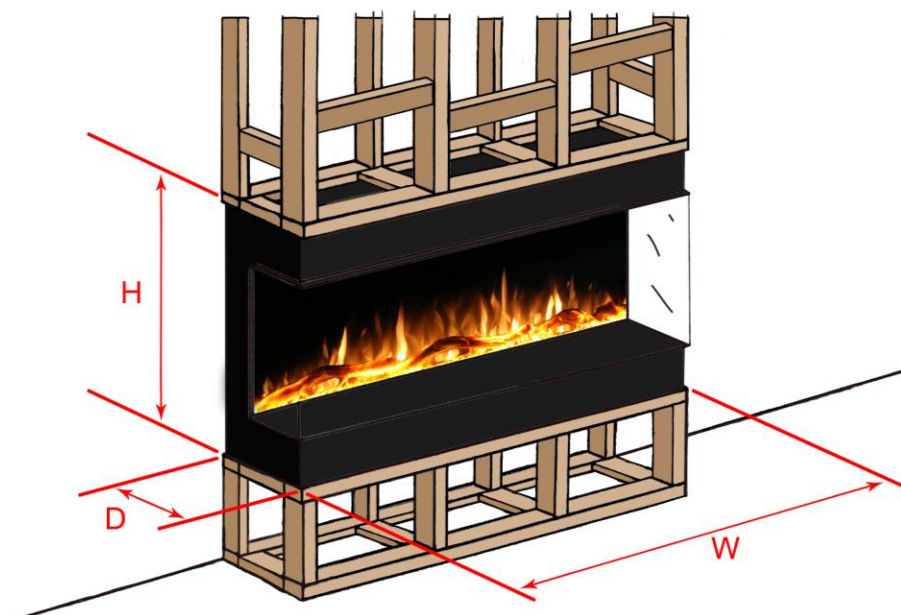

Model Number	W	D	H
MZEFTCEL36	36.6" 93.5cm	8.27" 24.5cm	19.25" 48.9cm
MZEFTCEL50	50" 127.5cm	8.27" 24.5cm	19.25" 48.9cm
MZEFTCEL60	60" 152.9cm	8.27" 24.5cm	19.25" 48.9cm
MZEFTCEL72	72" 183.2cm	8.27" 24.5cm	19.25" 48.9cm


Note:

Appliance is NOT load-bearing. Carefully consider weight of finishing materials when constructing rough framing.

Ensure installation complies with all local building codes and requirements.

The framing dimensions above apply to all three types of installation. The illustration represents the 3 sided installation, but if 1 or 2 sided installation is preferred, simply extend the frame further on the closed glass side.

Installation - Plasterboard

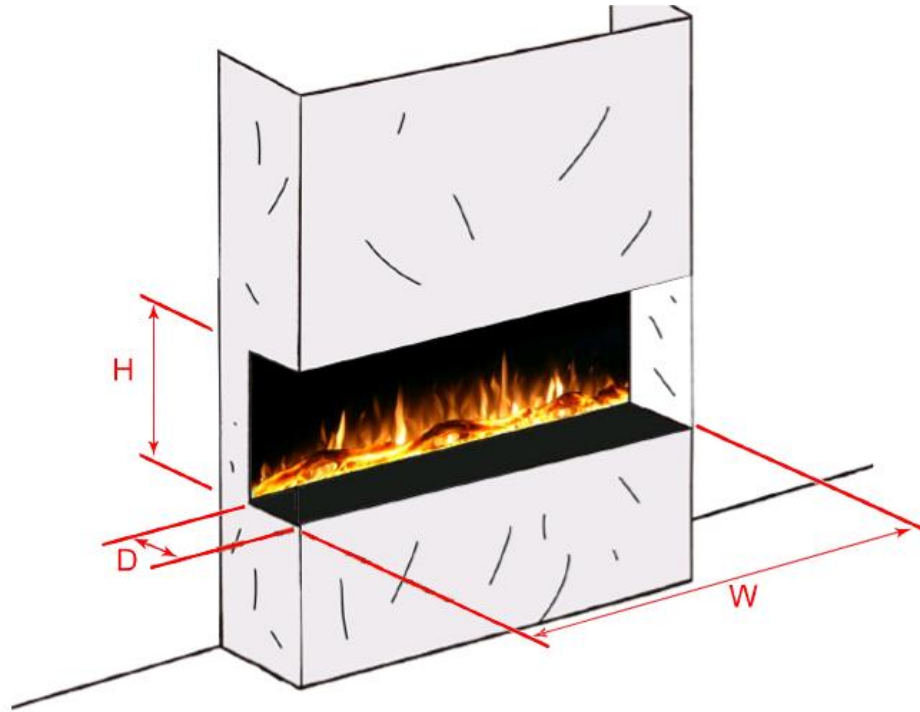



Model Number	W	D	H
MZEFTCEL36	36.6" 96cm	8.27" 14.6cm	19.25" 29.4cm
MZEFTCEL50	50" 130cm	8.27" 14.6cm	19.25" 29.4cm
MZEFTCEL60	60" 155.4cm	8.27" 14.6cm	19.25" 29.4cm
MZEFTCEL72	72" 185.7cm	8.27" 14.6cm	19.25" 29.4cm

Note:


Dimensions assume plasterboard of 12.5mm thickness is used.

Pre-installation

1. Remove the 8 screws from the top and bottom of the appliance (**Fig. 3-1**).
2. Install the 4 metal brackets (supplied) using the 8 screws previously removed (**Fig. 3-2**).

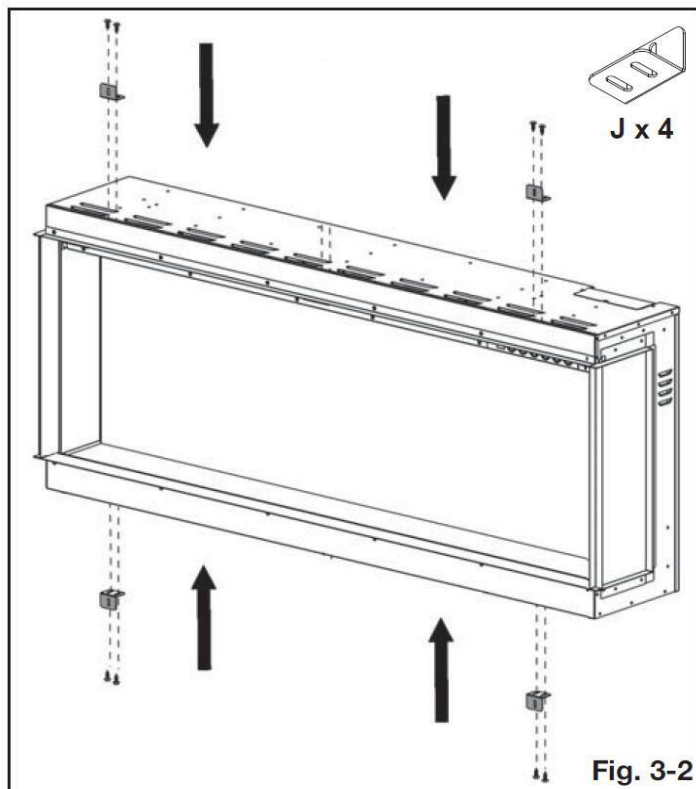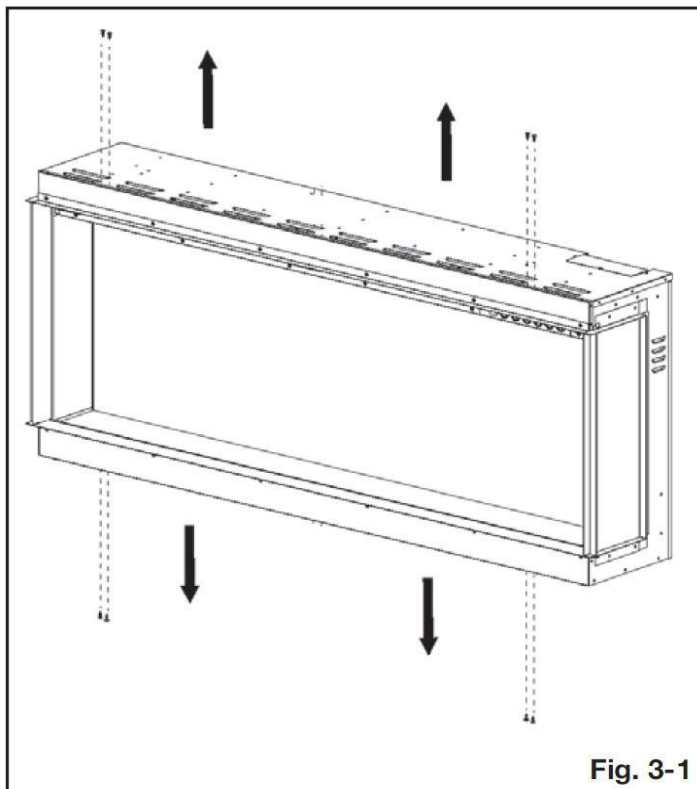

3. Remove the side trims and side panels from both sides of the appliance by removing the 12 screws (Fig.3-3). Set the side trims, side panels, and screws aside.

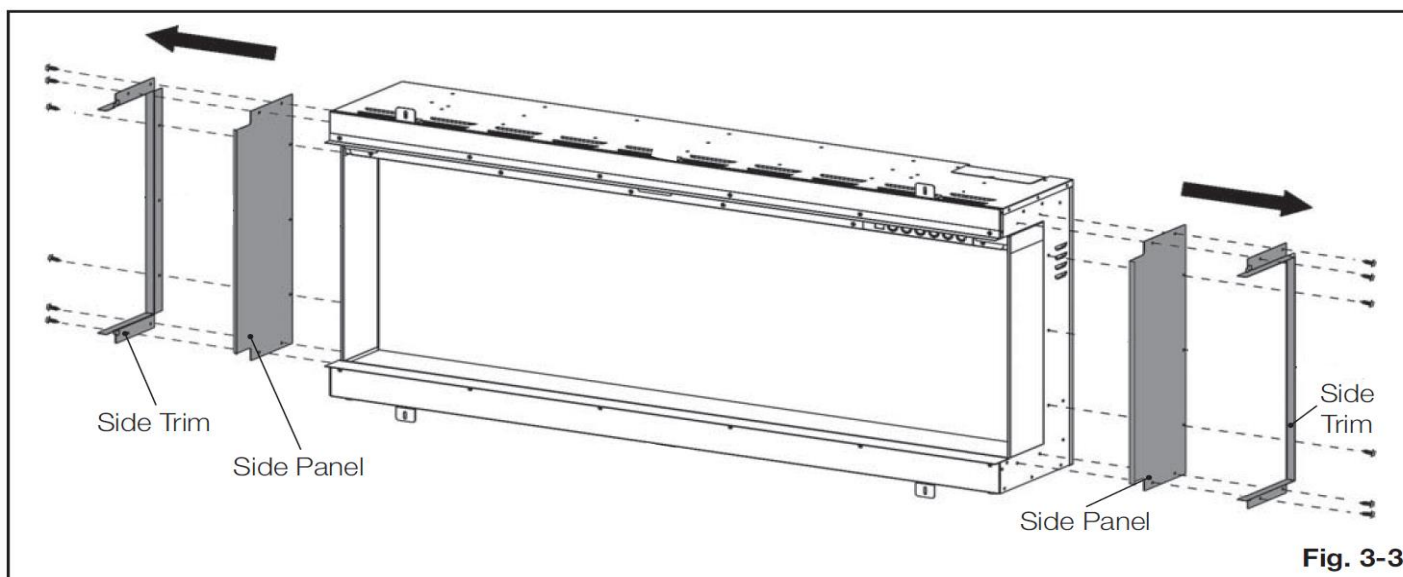


Three-sided Viewing Installation

Note:

When installed with both sides open, the appliance will have a front view, as well as left and right-side views.

1. Re-secure both side trims using the 12 screws previously removed (**Fig. 3-4**).

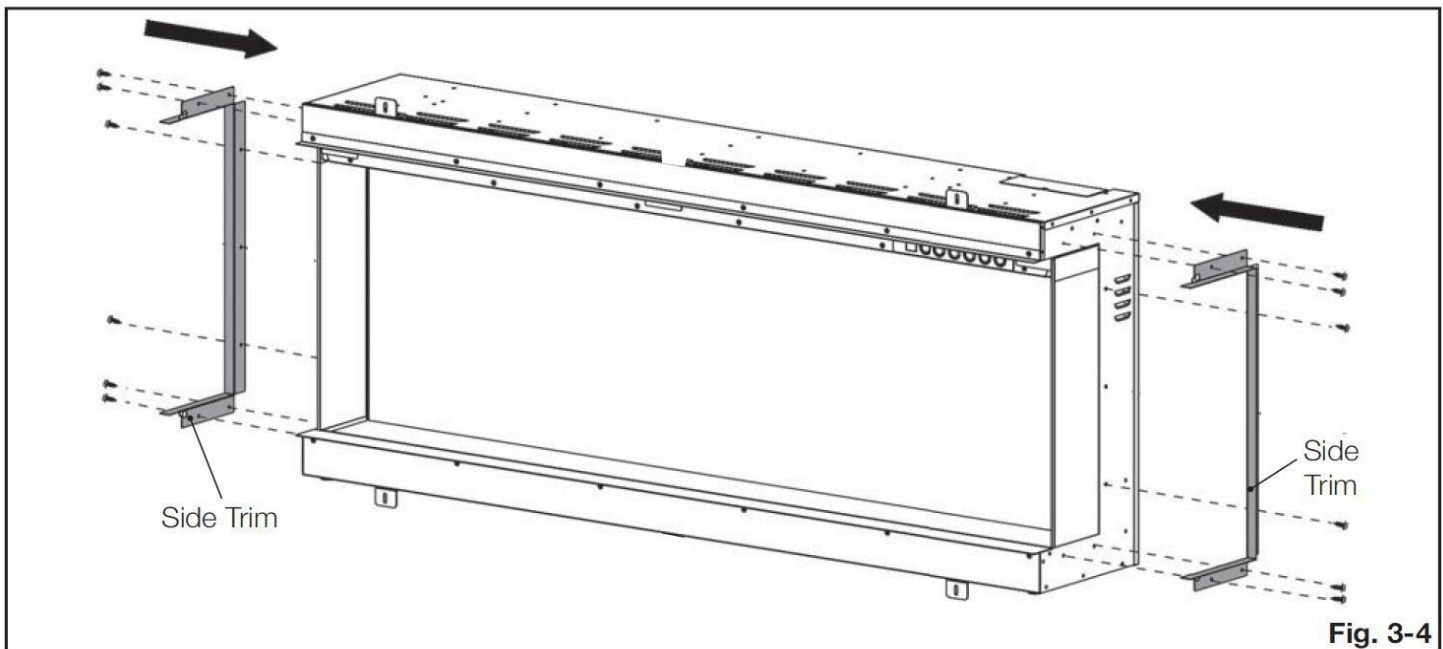


Two-sided Viewing Installation

Note:

When installed fully recessed into the wall with one side open, the appliance will have a front view and left- or right-sided view, depending on your desired open side.

1. For desired open side, re-secure the side trim using the 6 screws previously removed (**Fig. 3-5**).
2. For desired closed side, re-secure the side panel using the 4 screws previously removed (**Fig. 3-5**).

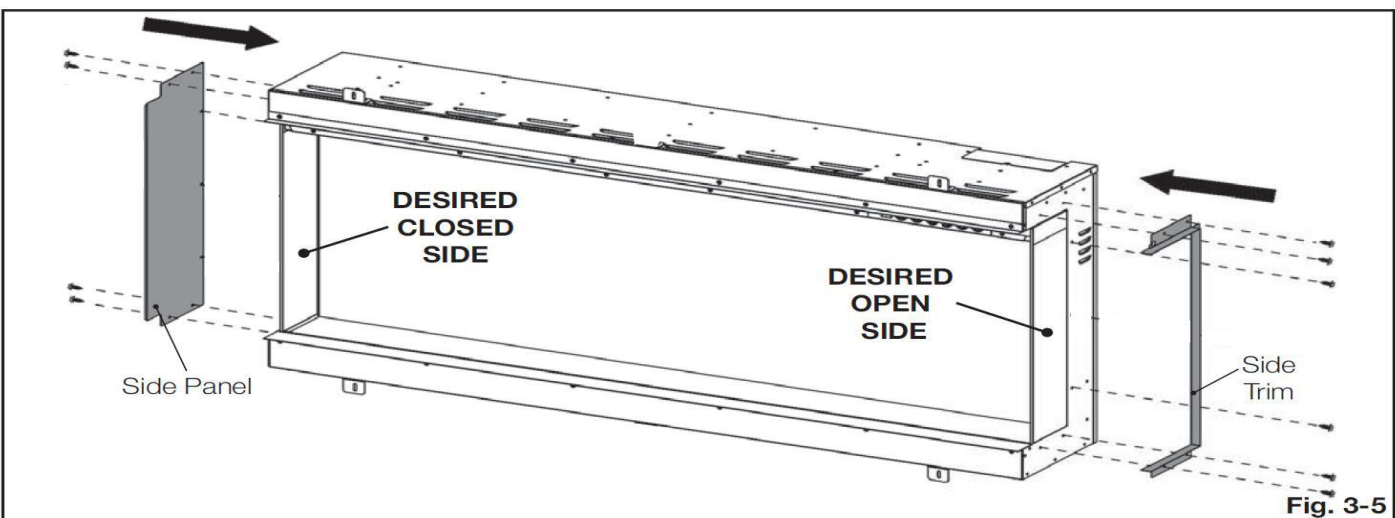


Single-sided Viewing Installation

Note:

When installed fully recessed into the wall with both left and right sides covered, the appliance will have a front view only.

1. Re-secure both side panels using the 8 screws previously removed (**Fig. 3-6**).



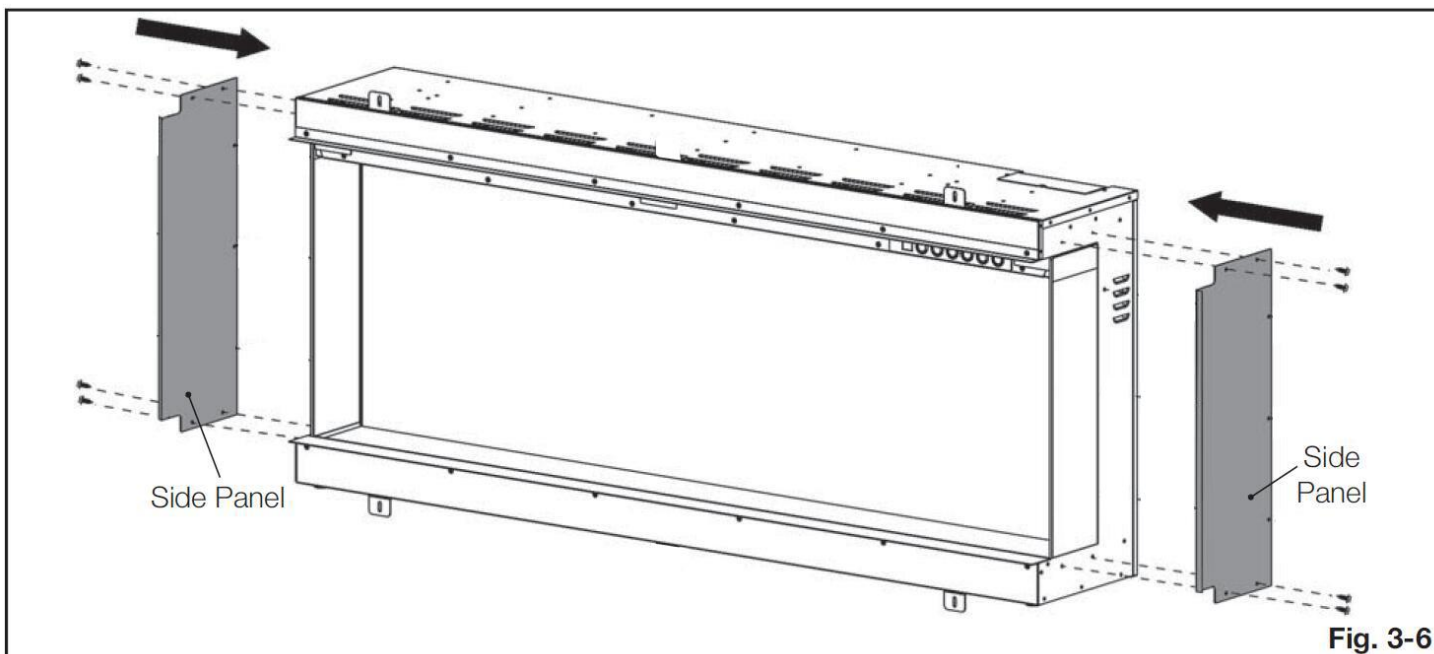


Front Glass Installation / Removal

Note:

Support the front glass through the entire process to avoid breakage.

1. Ensuring the glass metal bracket is fitted to the top of the front glass, place the front glass into the track located inside the firebox (**Fig. 4-1**).
2. Tilt the glass forwards and into place. (**Fig. 4-2**).
3. Secure the four flat head screws (supplied) through the bracket holes on the top, underside of the glass metal bracket (**Fig. 4-3**).
4. Reverse these steps to remove the front glass.

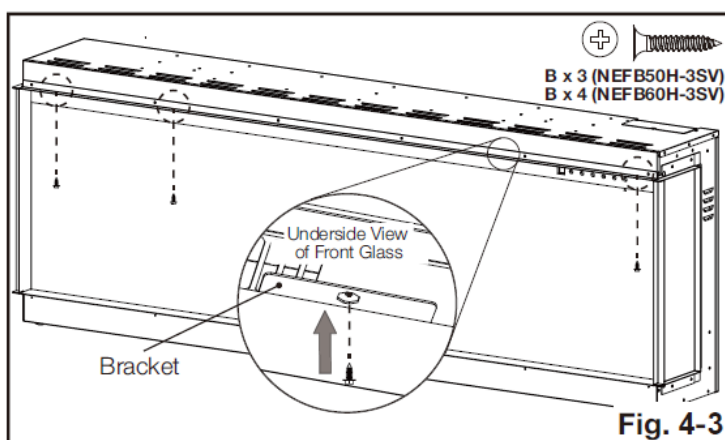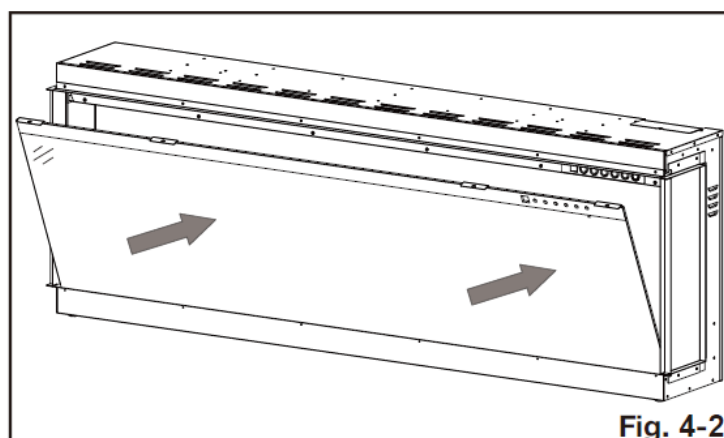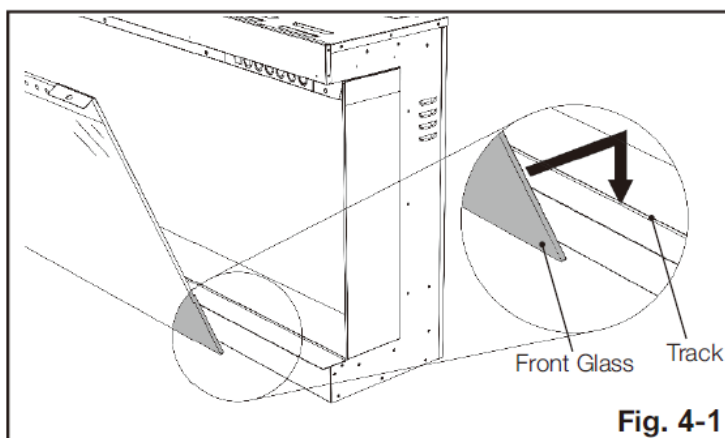

Fuel-bed Effect Installation

Note:

The appliance must be installed in its final location before the crystals, artificial logs and charred wood pieces are installed.

1. While supporting the glass, remove the screws holding the front glass screen in place. Remove the glass and safely store it to one side for now. **See page 12.**
2. Disperse the crystals evenly on the fuel-bed tray in a side-to-side motion. **Figure 1.** Next, using the same side-to-side technique, disperse most of the charred flakes onto the surface of crystals. Save some for later.
3. Place the artificial logs on the surface of the crystals, leaving a gap underneath so the fire effect is visible. **Figure 2.** To enhance the bed further, disperse the remainder of the charred wood flakes in and around each log.
4. Finally, when content with your fuel-bed, re-fit the glass screen **See page 12**, switch the fire on and relax.



Figure 1.



Figure 2.

Operation



Please read the entire owner's manual, including **all safety information**, before plugging in or using this product. Failure to do so could result in **fire, electric shock, or serious personal injury**.


Power

Plug the power cord into a 220-240V 50Hz outlet (see **IMPORTANT SAFETY INFORMATION** on **Pages 2 and 3**). Make sure the outlet is in good condition and the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.


Methods of Operation

The electric fire can be operated by the control panel located on the front of the unit or the remote control. **See figures below**.

Before operating, please review the **IMPORTANT SAFETY INFORMATION** on **Pages 2 and 3**.

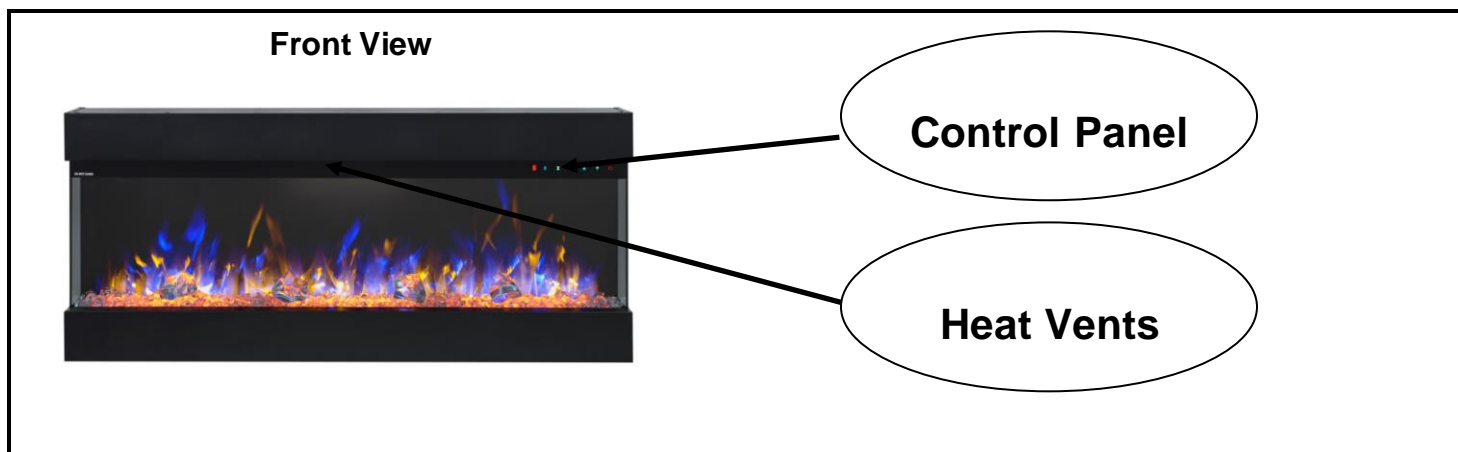



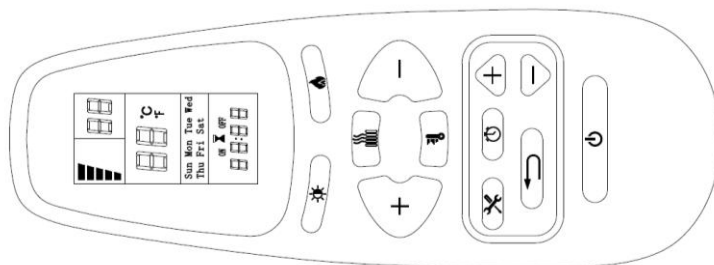



Control panel







Remote control


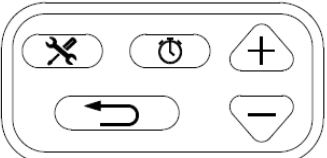




Control Panel Operation

BUTTON	FUNCTION	ACTION & INDICATION
	<p>ON: Enables control panel functions and remote control. Turns on flame effect.</p> <p>OFF: Disables control panel functions and remote control. Turns off flame effect.</p>	<ol style="list-style-type: none"> 1. Press once, Indicator light turns on. Power turns on. All functions enabled. 2. Press again, Flame effect turns off. Power and all functions turn off.
	<p>BRIGHTNESS button: Adjusts brightness.</p>	<ol style="list-style-type: none"> 1. Press once, Indicator light turns on. Brightness changes. 1. Press again, until desired brightness is selected.
	<p>FLAME button: Adjusts flame colour.</p> <p>NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on.</p>	<ol style="list-style-type: none"> 1. Press once, Indicator light turns on. Flame colour changes. 2. Press again, until desired colour is selected.
	<p>HEATER button: Turns heater on and off.</p> <p>NOTE: The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on.</p> <p>NOTE: To prevent overheating, the heater blows cool air for 10 seconds before the heater turns on, and after it turns off.</p> <p>NOTE: Heater overrides room temp control.</p>	<ol style="list-style-type: none"> 1. Press once, Indicator light turns on. Fan blows cool air for 10 seconds. Low heater (H1) turns on and blows warm air. 2. Press again, Indicator light remains on. High heater (H2) turns on and blows hot air. 3. Press again, Indicator light turns off. The fan blows cool air for 10 seconds, then turns off.
	<p>TIMER button: Turns heat on for a certain time period.</p>	<ol style="list-style-type: none"> 1. Press once, Indicator lights up. Heat on time goes to 30 minutes. 2. Press again, until desired time length is reached.
	<p>FUEL-BED button: Adjusts fuel-bed colour.</p> <p>NOTE: Fuel-bed color effect stays on until power button is turned off.</p>	<ol style="list-style-type: none"> 1. Press once, Fuel-bed color changes. 2. Press again, until desired colour is reached.

Remote Control Operation

BUTTON	FUNCTION	ACTION & INDICATION
	ON: Enables control panel functions and remote control. Turns on flame effect. OFF: Disables control panel functions and remote control. Turns off flame effect.	1. Press once , Indicator light turns on. Power turns on. All functions enabled. 2. Press again , Flame effect turns off. Power and all functions turn off.
	FLAME button: Adjusts flame colour. NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on.	1. Press once , Indicator light turns on. Flame colour changes. 2. Press again , until desired colour is selected.
	BRIGHTNESS button: Adjusts brightness.	1. Press once , Indicator light turns on. Brightness changes. 2. Press again , until desired brightness is selected.
	HEATER button: Turns heater on and off. NOTE: The heater only works when the flame effect is on. If the flame effect is off, the heater will not turn on. NOTE: To prevent overheating, the heater blows cool air for 10 seconds before the heater turns on, and after it turns off. NOTE: Heater overrides room temp control.	1. Press once , Indicator light turns on. Fan blows cool air for 10 seconds. Low heater (H1) turns on and blows warm air. 2. Press again , Indicator light remains on. High heater (H2) turns on and blows hot air. 3. Press again , Indicator light turns off. The fan blows cool air for 10 seconds, then turns off.

TIMER SETTINGS ON REMOTE CONTROL

	: Timer: Displays current day, time, and week. Press to enter or confirm timer settings.	
	: Settings: Press to move to next step. Press to confirm week timer.	
	: Back: Press to clear current settings. Press to return to the previous step.	
 	: Up and Down: Press to increase/ decrease certain settings.	

LCD Screen		
Weekday → Mon, Tues, Wed, Thurs, Fri, Sat, Sun	Sun Mon Tue Wed Thu Fri Sat	Note: The functions can only be adjusted when the related letters or digits are flashing. Note: Calibrate the timer to current time before entering the weekly settings.
Time Display → Current Time / Timer From 00:00 to 24:00 NOTE: 00-12:00 is AM / 13:00-24:00 is PM		

	THERMO-STAT button: Turns heater on and off to maintain room at a certain temperature. NOTE: Press & Hold the button for 5 seconds, the temperature setting will switch from °C to °F. Same way from °F to °C.	1. Press once , Indicator lights up. Temperature goes to 18 °C 2. Press again , until desired setting is reached. Digital display shows setting circles as below:
--	---	--

1 Set current day and time

1. Press once. When "MON" (Monday) begins flashing, use to select the current day.
2. Press . When the hour digits begin flashing, use to select the current hour.
3. Press again. When the minute digits begin flashing, use to select the current minute.
4. Press again. The current time is now set.

2 Set ON/OFF time and temperature on a weekly cycle

1. Press . When "MON" begins flashing, press 3 times. When "ON" begins flashing, use to select the desired hour and minute to turn on the heater. Press at any time to clear the digits and shut down "ON" timer.

note:




 
The timer can only be adjusted in 30-minute intervals (i.e. 00:00 - 00:30; 00:30 - 01:00, etc.)

2. Press . When "OFF" begins flashing, use to select the desired hour and minute to turn off the heater. Press at any time to clear the digits and shut down "OFF" timer.
3. Press again. When "18" begins flashing, use to select the desired temperature for Monday.

note:

If the temperature was previously set, those digits will be shown instead of "18".

4. Press again. When "TUES" appears on the screen and "ON" begins flashing, use to select the desired hour and minute to turn on the heater for Tuesday.
5. Press again. When "OFF" begins flashing, use to select the desired hour and minute to turn off the heater for Tuesday.

6. Press  again. When "18" begins flashing, use  to select the desired temperature for Tuesday.
7. Repeat steps 1 to 6 to set the "ON/OFF" time and temperature for Wednesday, Thursday, Friday, Saturday, and Sunday.
8. Press  or  to finish, ensuring to aim the remote control at the receiver, located in the middle of the appliance. The appliance will "beep" once to confirm your settings have been saved successfully.

Open window warning

If the room temperature decreases by 10 degrees within 3 minutes, the appliance will assume there is an open window nearby. In order to conserve energy, the heater will automatically switch from High Heat to Low Heat, or if the heater is already at Low Heat, it will turn off completely.

When switching from High Heat to Low Heat, the appliance will beep 3 times and the digital display will flash "88" 3 times before displaying the existing heating status.

When switching from Low Heat to Off, the appliance will beep 3 times and the digital display will flash "88" continuously.

To reset the heating function, see "operating remote control" section.

NOTICE

When the heater is first turned on, a slight odour may be present. This is normal and won't occur again unless the heater is un-used for a long period of time.

NOTICE

To improve operation, **aim** the remote control at the front of the fire unit. **DO NOT press the buttons too quickly.** Give the unit time to respond to each command.

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF. To reset:

1. Unplug the power cord from the outlet.
2. Turn the ON/OFF switch on the CONTROL PANEL to OFF. **Wait 5 minutes.**
3. Inspect the fire unit and make sure all vents are free from dust or lint. If they are clogged, use a vacuum to clean the vent areas.
4. With the POWER switch in the OFF position, plug the power cord back into the outlet.
5. If the problem continues, have your outlet and wiring inspected by a professional.

Remote Control Battery Information

- This remote control uses **Two AAA batteries (NOT included).**



NEVER dispose of batteries in **fire**. Failure to observe this precaution **may result in explosion**. Dispose of batteries at your local hazardous material processing center.

Care and Maintenance

Cleaning



ALWAYS turn the heater **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving the fire unit. Failure to do so could result in **electric shock, fire, or personal injury**.



NEVER immerse in water or **spray with water**. Doing so could result in **electric shock, fire, or personal injury**.

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- **DO NOT** use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- Use a good quality glass cleaner sprayed onto the cloth or towel. Dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.

Plastic:

- Wipe gently with a slightly damp cloth and a mild solution of dish soap and warm water.
NEVER use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Maintenance



Risk of electric shock! DO NOT OPEN any panels. No user-serviceable parts inside!



ALWAYS turn the heater **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving the fire unit. Failure to do so could result in **electric shock, fire, or personal injury**.

Electrical and Moving Parts:

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fire unit and are not serviceable by the consumer.

Troubleshooting/ FAQ

<u>Problem</u>	<u>Possible Cause</u>	<u>Solution</u>	<u>Note</u>
Fire not turning on	Fire not plugged in or switched on at socket	Check plug is correctly fitted into socket and the socket is turned on.	If all solutions have been tested and problem persists, a new control panel is required.
	Fuse blown	Disconnect plug and inspect the fuse. Replace with a 13A fuse if broken.	
	Faulty control panel	If the controls do not work, press each control continuously one at a time. After a few cycles, the controls should recognize the input and work correctly.	
Noisy heater	Fan clogged	Remove the heating unit and remove dust from fan.	If all solutions have been tested and problem persists, a new heating element/ fan assembly is required.
	Fan unbalanced/ catching on housing	Manually re-center fan on each side. Check fan is not warped or damaged.	
Heater only blowing cold air	Fan clogged	Remove the heating unit and remove dust from fan.	If all solutions have been tested and problem persists, a new heating element/ fan assembly is required.
	Faulty heating element	Inspect the heating element and make sure all wires are firmly connected.	
	Faulty fan motor	Fan may be rotating too slow.	
No flame picture/ partial flame picture	Loose connection	Ensure all wires are connected firmly.	If all solutions have been tested and problem persists, a new PCB is most likely required.
	LED blown (If partial flame picture)	Test the faulty LED strip using another LED power connector that you know works. If LED strip still doesn't work, the fault is most likely with the LED strip and not the PCB. New LED strip required.	
	Damaged PCB	New PCB required.	

Heater cutting out	Build-up of hot air	Ensure inlets and outlet are free from obstruction and there are sufficient clearances surrounding the unit.	If problem persists, the installation will need assessed to ensure it adheres to all required minimum clearances as stated in this manual.
	Thermostat setting causing heater to cut-out	Adjust thermostat setting on remote to maintain desired room temp or deactivate thermostat setting.	-
Heater switching on without activation	Thermostat set to keep room at certain temperature.	Adjust thermostat setting to maintain desired room temp or deactivate thermostat setting.	If all solutions have been tested and problem persists, a new PCB is required.
	Thermostat faulty	Replace PCB	

NOTE: Wiring and exploded diagrams to assist with fire repair are available on request.



WEEE:

Meaning of crossed-out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, **the retailer is legally obligated to take back your old appliance for disposal, free of charge.**

Manufacturer's name:

Micon Distribution Ltd.

Manufacturer's address:

1a Hallstown Road, Ballinderry Upper,
Lisburn, BT28 2NE

Product Warranty

Your product is guaranteed for one year from the date of purchase.

Should this product prove defective within one year of purchase due to a design fault, workmanship or material breakdown, the product will be repaired or replaced free of charge.

Product warranty is subject to the following conditions:

- The product is to be used for domestic purposes only in accordance with the operating instructions.
- Responsibility of proof of purchase lies with the end user(s), who must prove product purchase within 12 month period of claim date.
- All warranties, will be invalidated if unauthorised repairs or modifications are made to the electric fire, or in case of accident, misuse or damage caused by improper installation, or to damage occurring during transit to or from the repairer and altered or missing serial numbers.
- This Warranty does not apply to Heating elements, Bulbs or fuses within the product.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee

Should you require after sales information or warranty assistance within UK & Ireland with this product please go to <https://www.micon-dist.com/>.

Imported and Distributed by Micon Distribution Ltd. 1a Hallstown Road, Ballinderry Upper, Lisburn BT28 2NE. Eze Glow Brand exclusively owned by Micon