





Celestial 36" Aura Suite


FITTING GUIDE



Fixings list

REF NO	DESCRIPTION	QTY
U1	 5*30mm	16 PCS
U2	 5*14mm	8 PCS
U3	 5*25mm	6 PCS
U4	 5*50mm	10 PCS


Parts list

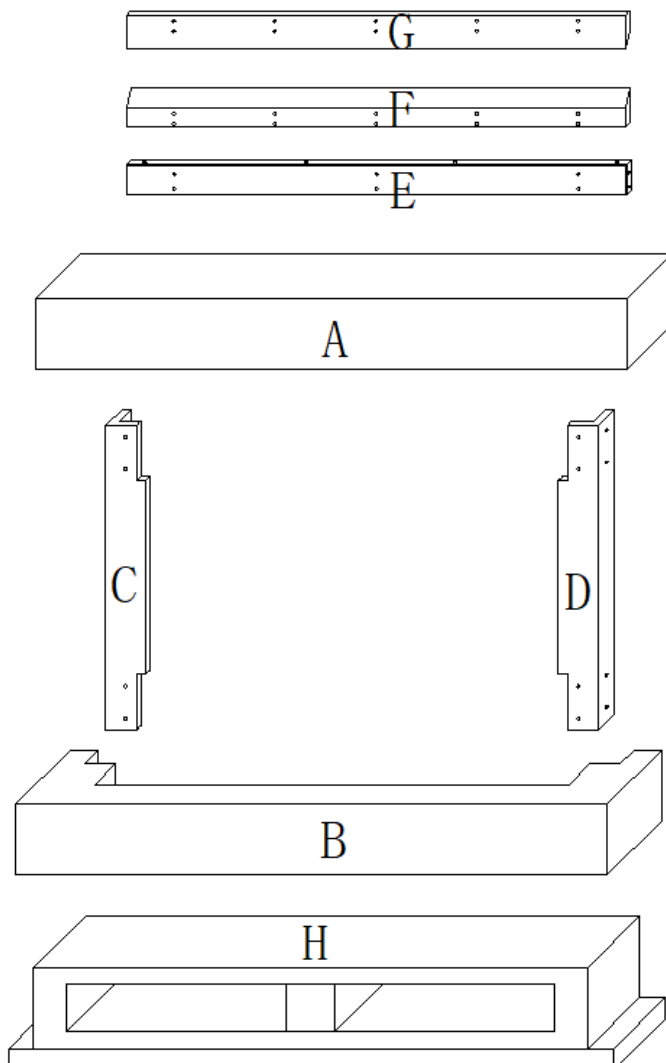

- A – Top piece
- B – Bottom piece
- C – Left side slip
- D – Right side slip
- E – Metal support bracket
- F – Wall bracket (fit-to-suite)
- G – Wall bracket (fit-to-wall)
- H – Log plinth

Installation

Step 1:

U1:  8PCS


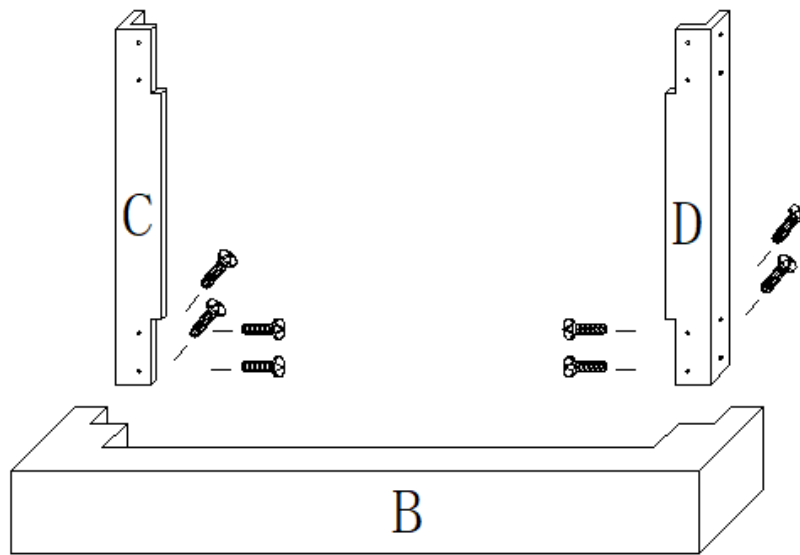


Fig.1

Rest 'Part B' on a non-abrasive, stable surface. Fit 'Part C' and 'Part D' using fixing 'U1' to secure the pieces in the locations displayed above.

Step 2:

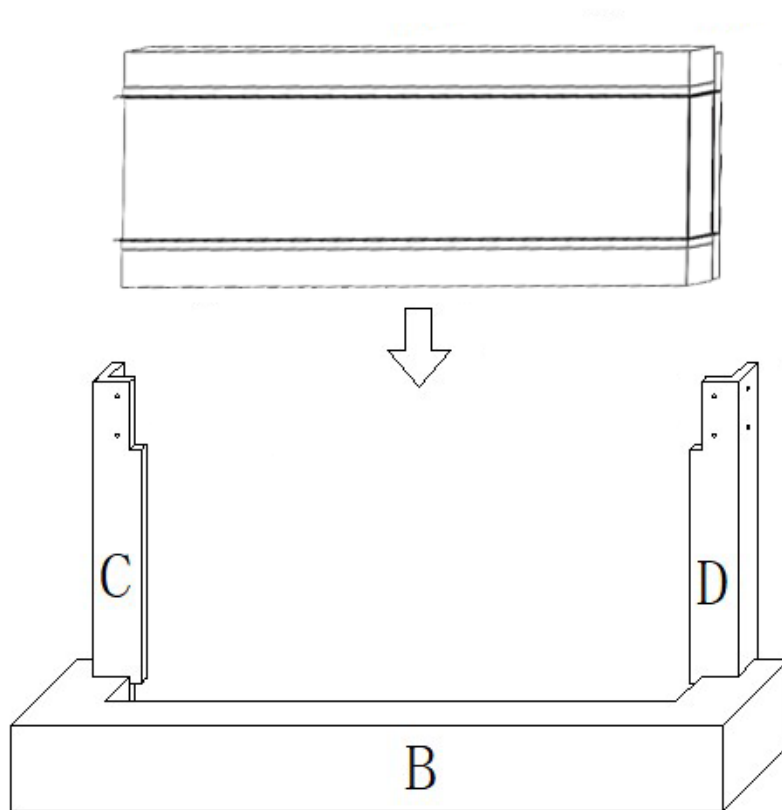

Fit the 3-sided lips to the fire unit (see fire manual for assistance). Lift the fire unit and slot it into the recess opening on 'Part B' from above, ensuring the fire unit's 3-sided lips are in front of 'Part C' and 'Part D'.

Step 3:

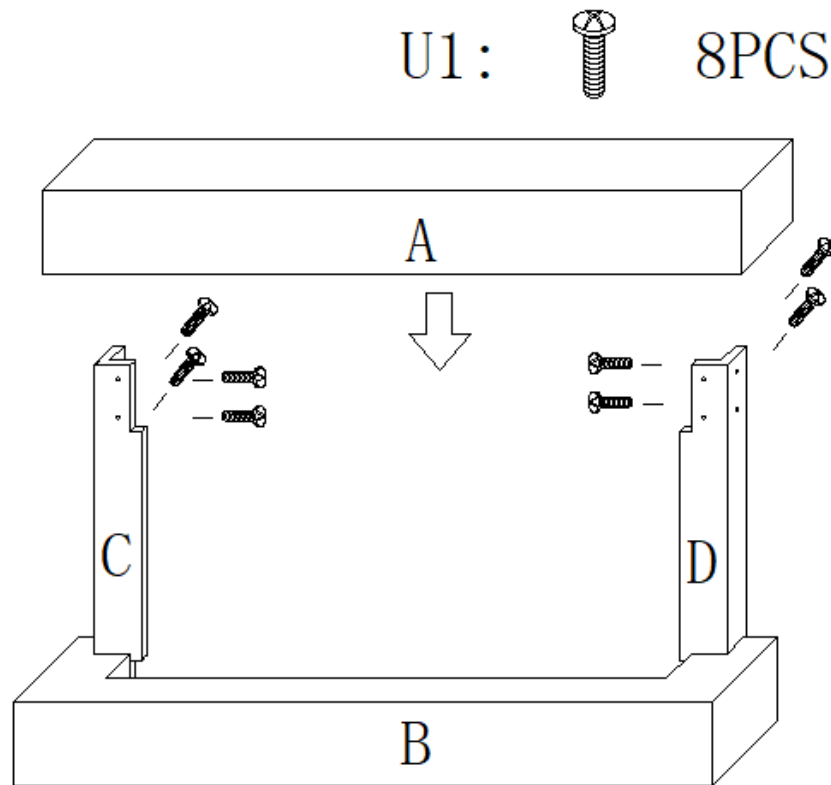


Fig. 2

Fit 'Part A' - slide 'Part A' over 'Part C' and 'Part D' and the fire unit. Secure in place using fixing 'U1', as shown above.

(Fire unit is fitted at this point, but not shown in above image to make it clearer).

Step 4:

U2:  8PCS



Fit metal bracket 'Part E' to the inside of 'Part A' using fixing 'U2'.

(Fire unit is fitted at this point, but not shown in above image to make it clearer).

Step 5:

U3:  6PCS

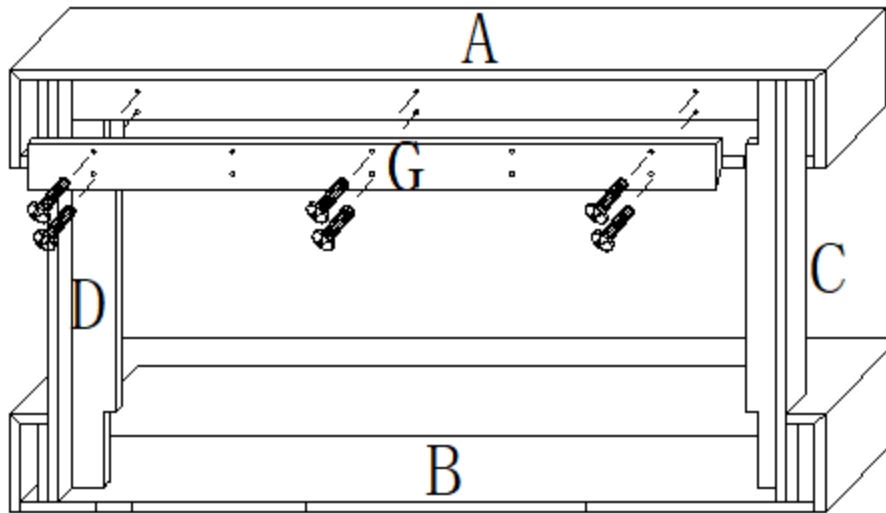



Fig. 4 BACK

Fit 'Part G' to 'Part E' using fixing 'U3', as shown above.

(Fire unit is fitted at this point, but not shown in above image to make it clearer).

Step 6:

U4:  10PCS

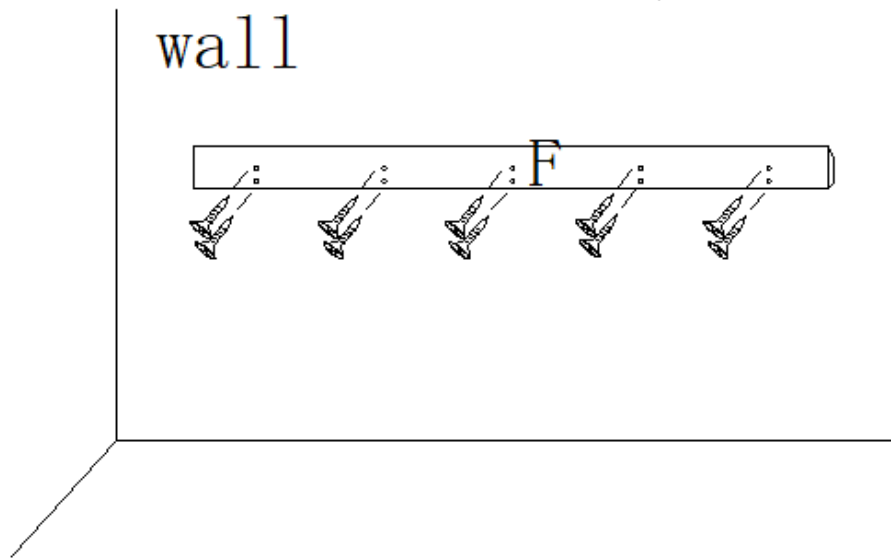

Fit 'Part F' to your desired location on the wall using masonry wall fixings (if masonry wall – not included) OR fixing 'U4' (if stud wall).

Step 7:

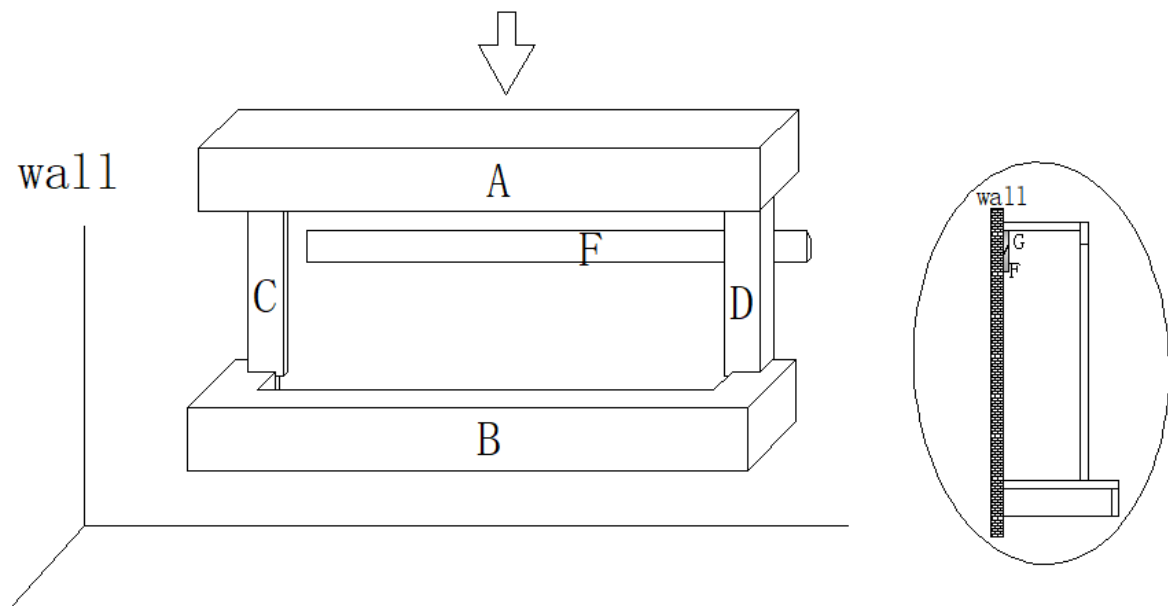


Fig. 6

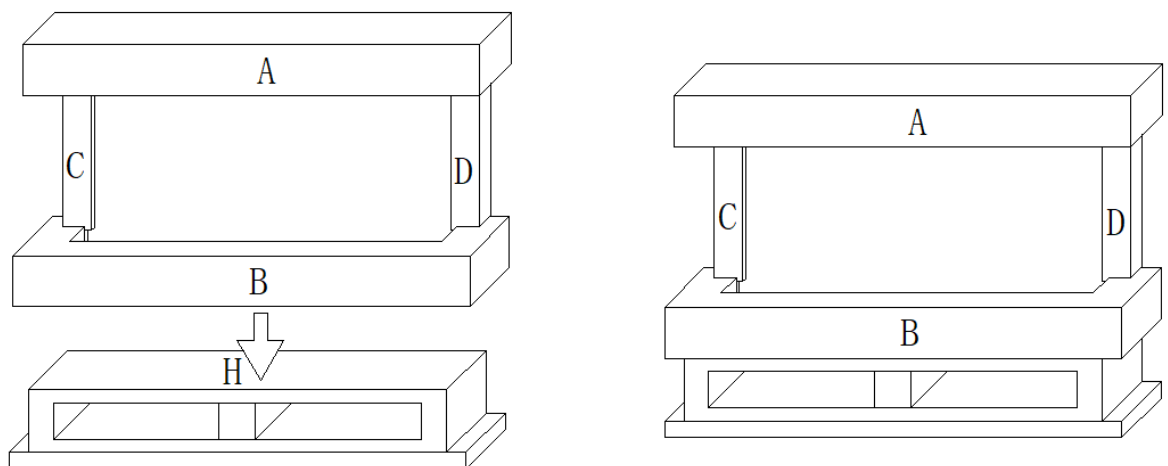


Fig. 7

Fit the plinth in its final location below the wall bracket and rest the suite on to the plinth/wall bracket to finalize the fit.

Step 8 – Fit completed.

